

How to Reseat the Hopper Door to the NVS-07

REQUIRED TOOL

1. # 4 Allen wrench



IMPORTANT SAFETY INSTRUCTIONS



CAUTION

Make sure your pugmill is unplugged before you start any repairs!



BEFORE YOU BEGIN

Make sure the hopper door and the rubber gasket are completely free of debris. Any amount of debris can prevent a tight seal.



STEP 1

Loosen the hinge screws of the hopper door using a # 4 Allen wrench. NOTE: Loosen the screws but Do Not Remove them.



STEP 2

Move the hopper lid back and forth to reseat the lid on the proper position.



STEP 3

Once the lid has been properly resealed, re-tighten the hinge screws making sure not to knock the hopper door out of position.